



Габаритные размеры DRV


DRV025/030

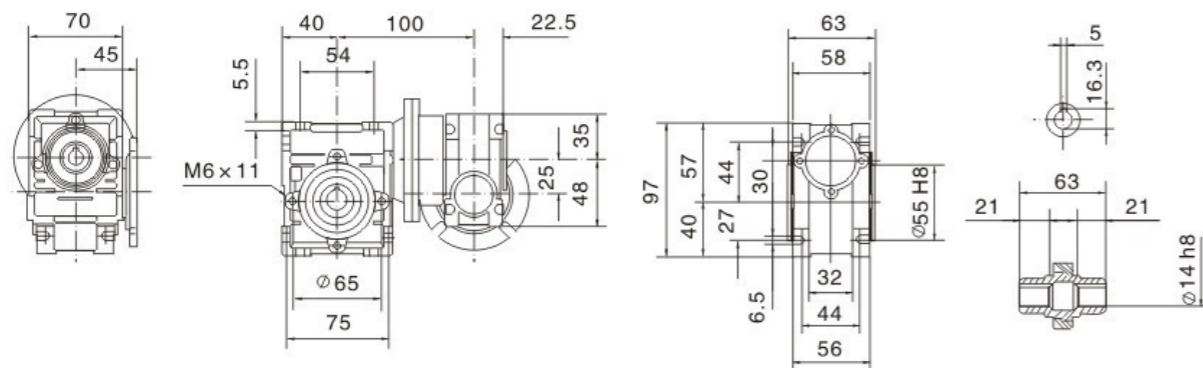


DRV025/040

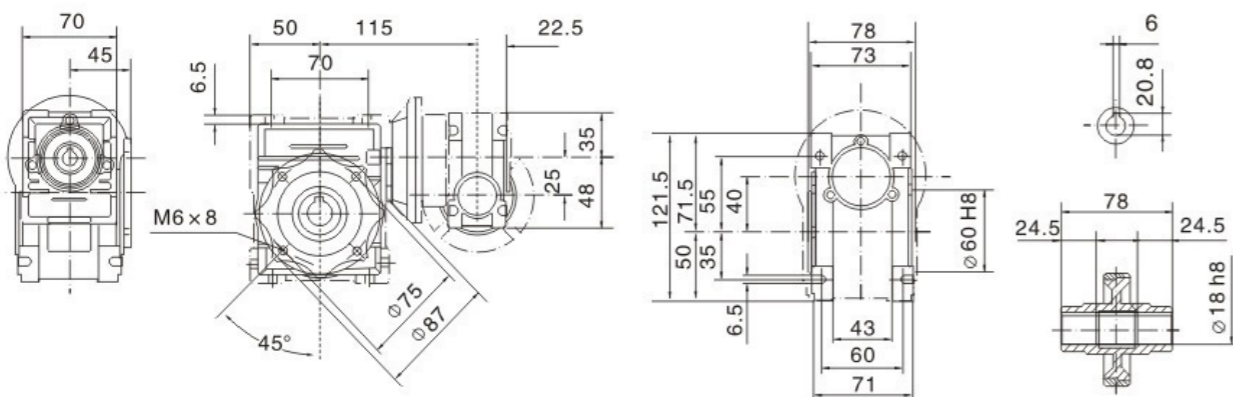


DRV030/040

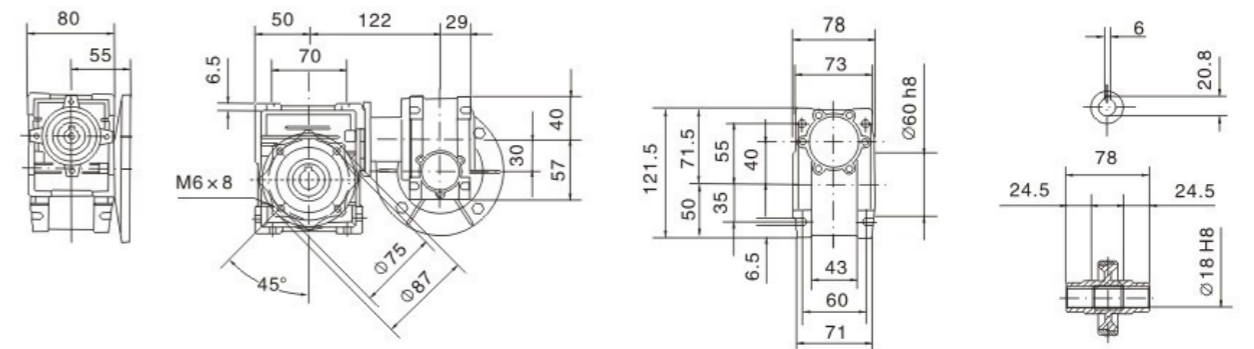


DRV030/050

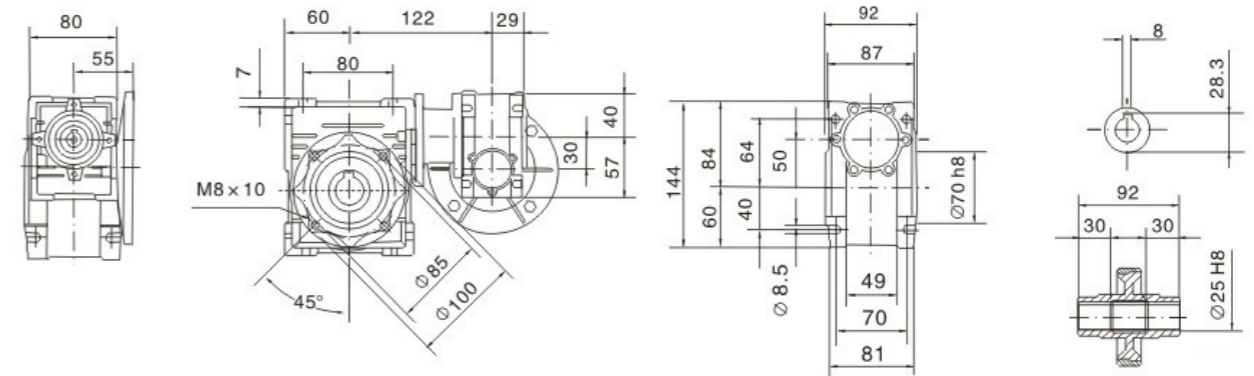


DRV030/063

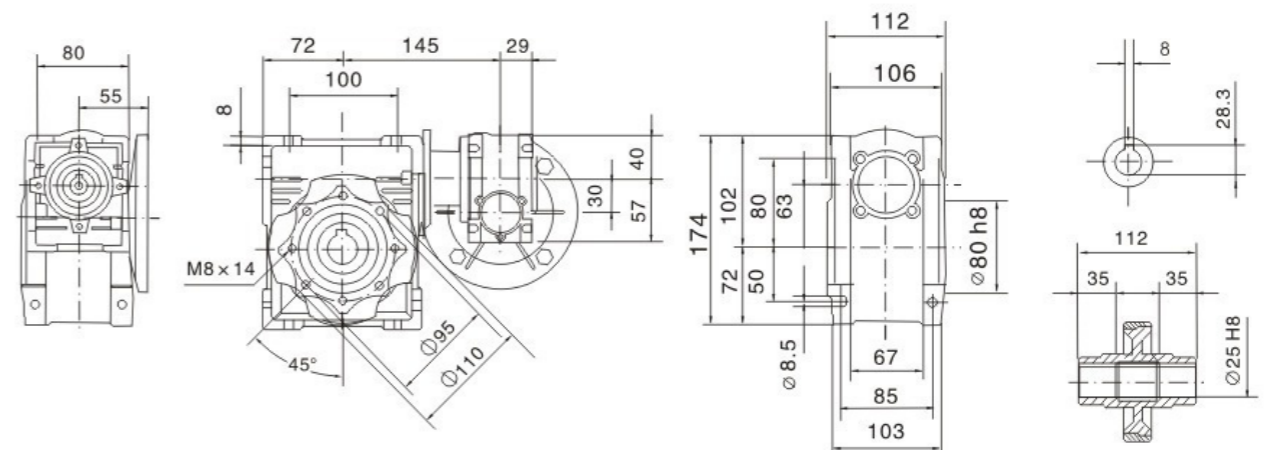


DRV040/075

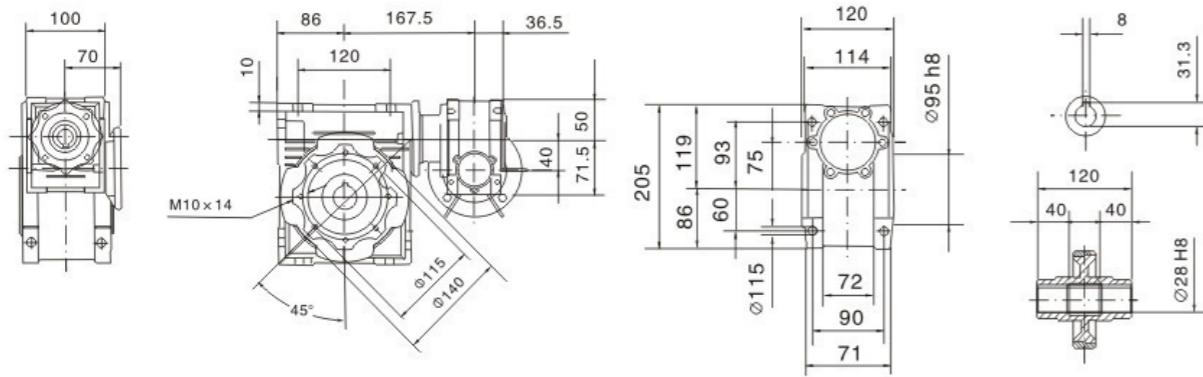


DRV063/130

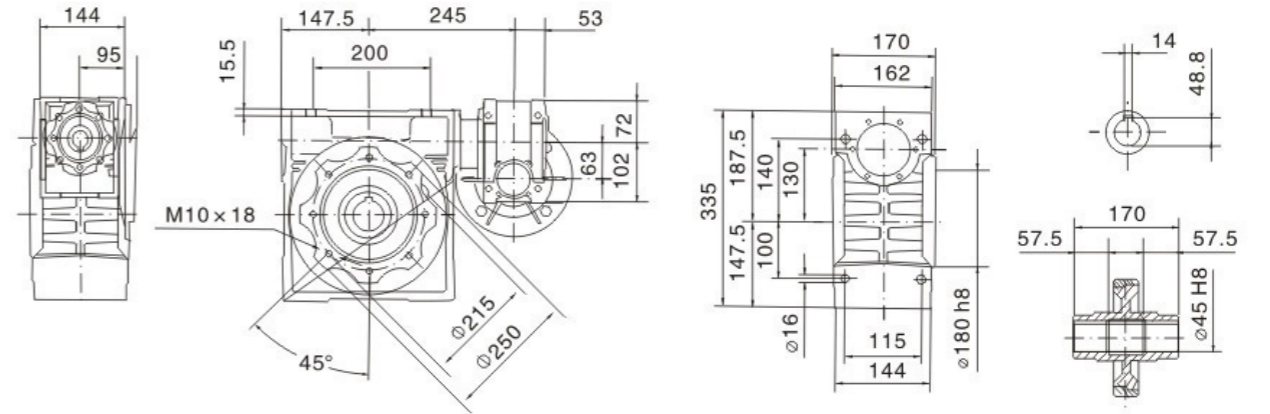

DRV040/090

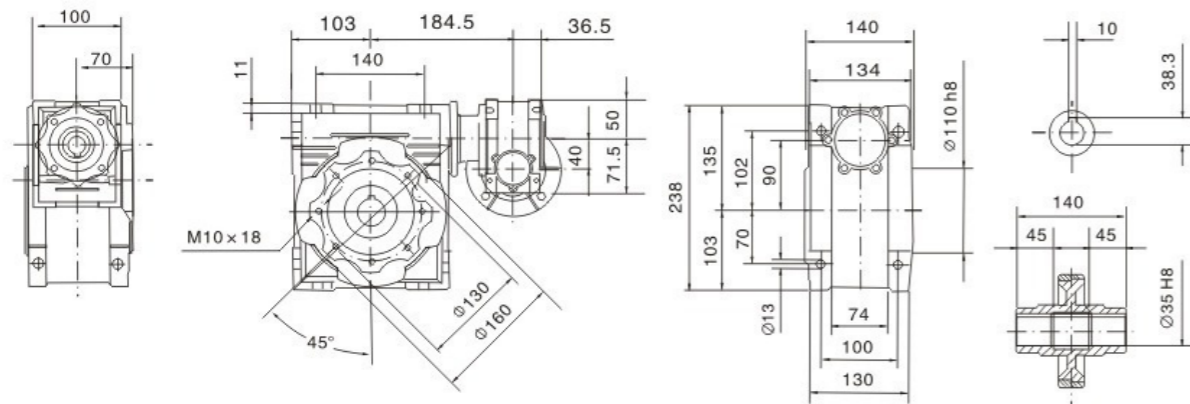

DRV063/150

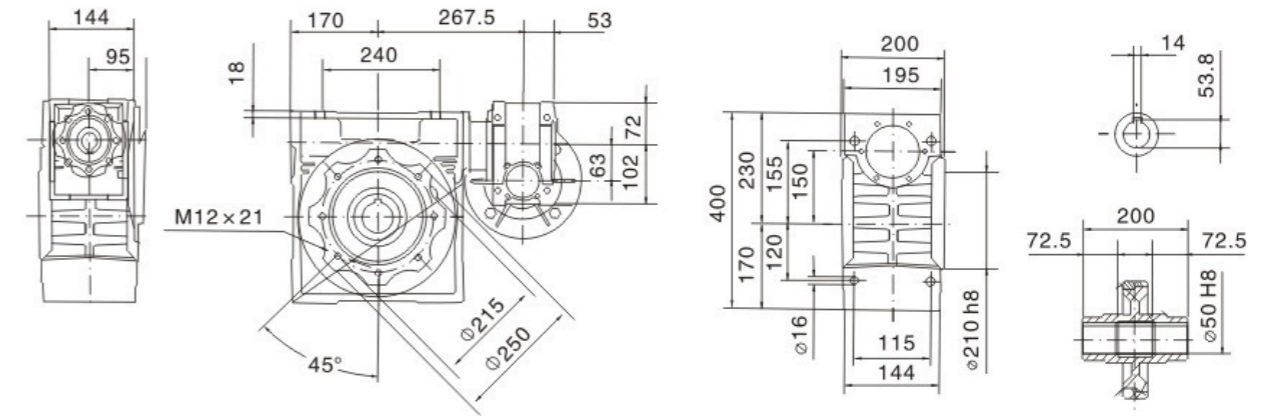

Направление входного вала и выходного фланца

DRV050/110

